


14732

Remote for dimmable sensors

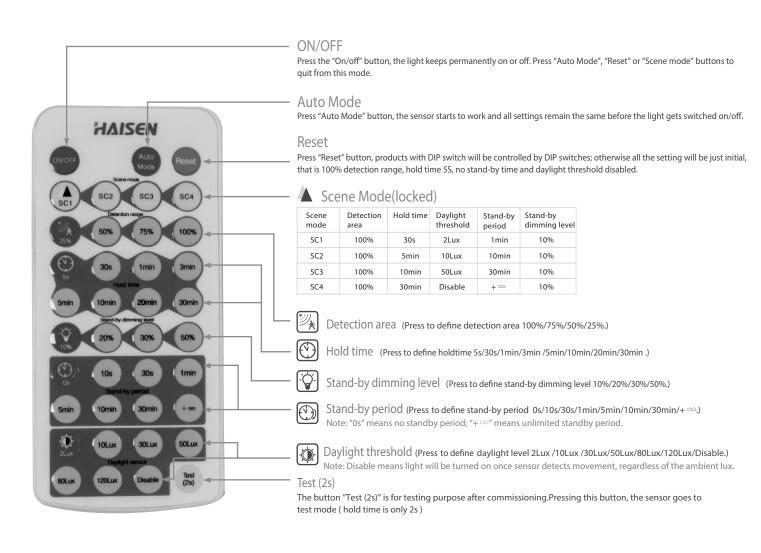

Attention

- 1. Light turns on when sensor is wired correctly.
- 2. When using on/off button, the rest setting buttons don't work.
- 3. Press "Auto Mode", "Scene mode" or "Reset" button before setting detection range, holdtime, daylight threshold, standby dimming level and standby period, sensor flickers after receiving signals.
- 4. Every change will be automatically saved.