




This instruction sheet is relevant to Phoebe LED Hera Dual Integrated Downlight part codes: 7567 & 7574.

THANK YOU for buying this PHOEBE LED product. To help ensure this luminaire gives complete satisfaction please only use it according to the following instructions, and then pass the instructions to the appropriate person for retention and future reference.


Warning

- 1. Installation only to be carried out by a qualified electrician
- 2. Please ensure surface is suitable and capable of holding the lamp weight
- 3. Pre-cut hole before installation, (see below chart for hole diameter)
- 4. Do not operate if product is damaged
- 5. This product is not suitable for fire rated installations

Dimensions - Cut-Out Diameter

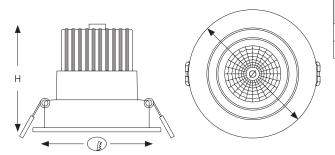

Product Code	Power	Dimensions (mm)			Driver Dimensions		
		Ø	н	(m)	w	L	н
7567	9W+3W	92mm	93mm	Ø 78mm	45mm	131mm	27mm
7574	15W+5W	120mm	95mm	Ø 105mm	45mm	131mm	27mm

 


- a. Switch off power
 - b. Prepare cut-out hole in your surface to specified dimensions as stated in above table






- a. Connect driver to 240V mains electricity in accordance with current wiring regulations
- To Mains To Driver

 - 3 a. Insert driver into recess
 - b. Connect driver to downlight using supplied connect
 - c. Tighten cover to secure the connection



 - a. Push back spring clips and insert downlight into recess
 - b. Ensure luminaire is a flush fit and has plenty of ventilation, do not cover with insulating material









NB. For high voltage circuit insulation testing disconnect mains input supply first. (Do not circuit test using a Megger)

- 5 a. Switch power on/off at the wall switch within 3 seconds to toggle between lighting modes.
 - **b.** Switch On = Inner Light Switch Off/On = Outer Ring Switch Off/On = Both Inner Light & Outer Ring











3000K Inner Light











6000K Outer Ring

