

3-Hour Emergency Kit Self Test and Manual Test Function Instructions



LED Operation Indicator

This instruction sheet is relevant to Phoebe LED Emergency Kit

For use with compatible Phoebe LED Products

THANK YOU for buying this PHOEBE LED product. To help ensure this product gives complete satisfaction please only use it according to the following instructions, and then pass the instructions to the appropriate person for retention and future reference.

BEFORE YOU START PLEASE READ ALL THE INSTRUCTIONS CAREFULLY

IMPORTANT INFORMATION

PRIOR TO INSTALLATION



Turn power off at the mains

This product contains a lithium-iron phosphate battery (LiFePO4) After

Installation is complete please mark the unit with the Installation date.

Charge time: 24hours

Dimensions


The unit can be charged from 220-240v mains source

Charging capacity: 2.0Ah **Discharge time:** ≥3 Hours

ONLY ONCE INSTALLATION IS COMPLETE



Turn power back on at the mains

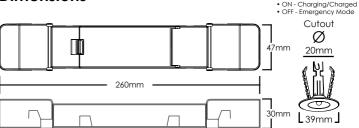

CIRCUIT TESTING

For high voltage circuit insulation testing disconnect mains input supply first


(Do not circuit test using a Megger)

WARNING

- 1. Installation only to be carried out by a qualified electrician in accordance to the local regulations.
- 2. Please ensure surface is suitable and capable of holding the unit weight
- 3. Do not operate if product is damaged

Wiring Information


Installation only to be carried out by a qualified electrician in accordance to the local regulations.

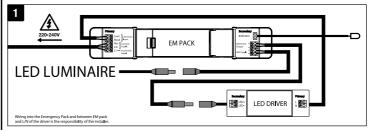




Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

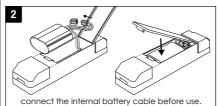

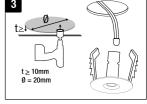

Images are for information only. Phoebe LED shall not be held liable for improper operation of the product in circumstances where procedures and specifications have not been followed correctly.

Tel: +44 (0)1274 657 088 **Fax:** +44 (0)1274 657 087 **Web:** www.cromptonlamps.com

SELF TEST INFORMATION

⋬ PRODUCT MUST BE CHARGED FOR 24 HOURS UNINTERRUPTED AFTER INSTALLATION

| LED INDICATOR STATUS | | | | | | | | |
|----------------------------|-------------------------|---|--------------------------|-------------------------|--|--|--|--|
| Green | System Healthy | | Red | Battery Charging Fault | | | | |
| Green Flash 1 x per second | Duration Test Pending | | Red Flash 2 x per second | Battery Duration fault | | | | |
| Green Flash 2 x per second | Duration Test Running | | Red Flash 4 x per second | Lamp or Luminaire Fault | | | | |
| Green Flash 4 x per second | Functional Test Running | 1 | | | | | | |

DURATION TESTING (3 HOURS)

- An automatic duration test wi
 ■ occur at a random point between 24 48 hours after commissioning to allow for battery charing.
- An automatic duration test will occur annually at a random point in the 52nd week of each year
- A manual duration test will occur at a random point between 0 − 24 hours after pressing the manual test button for 5-10 seconds.
 - Time will be added to allow the battery to charge if it has been charging for less than 24 hours.
- A duration test that has been delayed by events such as a power cut inturruption or insufficient charging will be automatically rescheduled.
 The Green LED will flash 1 x per second to indicate there is a pending duration test.
- Any faults found during duration testing will be reported via the LED indicator as detailed above. Re-commissioning is required to clear and faults.

FUNCTIONAL TESTING (<2 MINUTES)

- An automatic duration test will occur every 7 days.
- A manual duration test will occur after pressing the manual test button for 1-2 seconds.
- Any faults found during duration testing will be reported via the LED indicator as detailed above. Re-commissioning is required to clear and faults.

LAMP OR LUMINAIRE FAULT

- Turn off the suppl and replace or correct any fault with the lamp or luminaire then reconnect the supply,
- Press the manual test button for 5 10 seconds, a manual test will then occur at a random point between 24 48 hours later to allow the battery to charge fully.
- If the battery and power have been disconnected, the mdoule will re-commission and automatically test the replacement,
- A successful runctional test will override any faults reported by a duration test. A full duration test or re-commissioning is required to clear fault reports.

BATTERY FAULT

- Turn off the un-switched supply to the emergency module and replace the battery, then reconnect the supply.
- If the fault was due to the battery not being connected, the un-switched supply must still be turned off when connecting the battery to clear the batter fault.
 After reconnecting the supply, the emergency module will then re-commission and so automatically test the replacement at a random point between 24 48 hours after commissioning to allow for the battery to charge fully.

MANUAL TEST INFORMATION

⋬ PRODUCT MUST BE CHARGED FOR 24 HOURS UNINTERRUPTED AFTER INSTALLATION

The green charging indicator will be visible when the luminaire is in normal operation and also when switched off. If the indicator is not ON, the battery or invertor may be faulty and needs to be changed.

After connecting the mains supply check the following:

- The green charge indicator LED is illuminated. This indicates that the mains supply is present and that the charger circuit is working correctly.
- The unit should be left on charge for a minimum of 24 hours before testing the emergency mode,
- To simulate normal mains supply failure, operate the key switch The lamp will now light under emergency conditions.
- When the unit no longer meets its rated duration of operation the battery pack must be replaced with a battery of the same type, voltage and Amp-hour rating.

Emergency Installation and Inspection

| Installation / Test Record | Serial / Luminaire Number: | | |
|-------------------------------|----------------------------|-------|--|
| | Insta ll ed By: | Date: | |
| | Commissioned By: | Date: | |

| | Yea | ar 1 | Year 2 | | Year 3 | | Year 4* | |
|--------------|--------|------|--------|------|--------|------|-------------------------------|------|
| | | | | | | | *The battery must be replaced | |
| Monthly test | Signed | Date | Signed | Date | Signed | Date | Signed | Date |
| 1 | | | | | | | | |
| 2 | | | | | | | | |
| 3 | | | | | | | | |
| 4 | | | | | | | | |
| 5 | | | | | | | | |
| 6 | | | | | | | | |
| 7 | | | | | | | | |
| 8 | | | | | | | | |
| 9 | | | | | | | | |
| 10 | | | | | | | | |
| 11 | • | | | | | | | |
| 12 | | | | | | | | |