

This instruction sheet is relevant to Phoebe LED Electra Recessed Scoop part codes: 10406 & 10413.


THANK YOU for buying this PHOEBE LED product. To help ensure this luminaire gives complete satisfaction please only use it according to the following instructions, and then pass the instructions to the appropriate person for retention and future reference.

Warning


1. Installation only to be carried out by a qualified electrician
2. Please ensure surface is suitable and capable of holding the lamp weight
3. Pre-cut hole before installation, (see below chart for hole diameter)
4. Do not operate if product is damaged
5. This product is not suitable for fire rated installations



Dimensions - Cut-Out Diameter

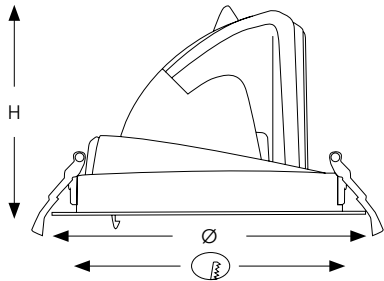

Product Code	Power	Dimensions (mm)			Driver Dimensions		
		Ø	H		W	L	H
10406	37W	190mm	137mm	Ø 175mm	37mm	135mm	25mm
10413	37W	190mm	137mm	Ø 175mm	37mm	135mm	25mm

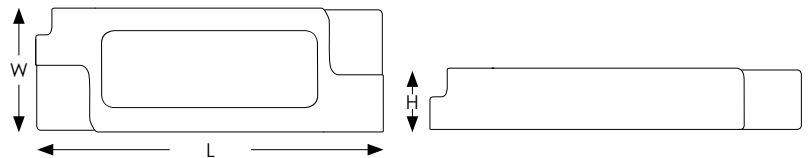

**BEFORE YOU START
PLEASE READ ALL THE
INSTRUCTIONS CAREFULLY**

PRIOR TO INSTALLATION

Turn power off at the mains

**ONLY ONCE INSTALLATION
IS COMPLETE**

Turn power back on at the mains

CIRCUIT TESTING

For high voltage circuit insulation testing disconnect mains input supply first
(Do not circuit test using a Megger)

- 1** a. Ensure that the surface is suitable and capable of holding the lamp weight, cut-out a hole in your surface to specified dimensions as stated in the table above

- 2** a. Connect driver to 240V mains electricity in accordance with current wiring regulations

- 3** a. Insert driver into recess
b. Connect driver to downlight using supplied push fit connector

- 4** a. Push back spring clips and insert downlight into recess
b. Ensure luminaire is a flush fit and has plenty of ventilation, do not cover the luminaire with insulating material

Images are for information only. Phoebe LED shall not be held liable for improper operation of the luminaire in circumstances where procedures and specifications have not been followed correctly. Crompton Lamps Limited 2018